



12.1 PROGRAMMING SECTION



All programming of the V21 is done in the service mode as indicated in the following steps below. The main service modes are indicated in white text and the sub-modes are indicated in black text.

Example:

time Time/Date Setting Mode

year

Year Setting

nth

Month Setting

date

Date Setting

hour

Hour Setting

dSt

Daylight Saving Time



THREE-BUTTON PROGRAMMING

All programming of the V21 options is done in the service mode. To enter the service mode open the vendor door, find the service mode button located on the control board, then press and release the service mode button. To toggle through all the service modes, use selection button one.

The first three selection buttons are used to navigate through the programming as follows:

Button	Description	Usage
Selection Button 1	Up/Down	Increase/Decrease, Next/Previous
Selection Button 2	Enter	Go to sub-level, activate function
Selection Button 3	Exit	Return to previous level, exit, save

FIGURE 1

The controller will automatically return to the Open-Door Sales Mode if:

1. No information from the selection switches is received within approximately 30 seconds.
2. The service mode button is pressed a second time.
3. The (Exit) button is pressed.

When the programming is entered, any established credit is returned. When and if the door is closed, the controller will exit the service mode and return to the sales mode.

MIS Data

As soon as the outer door is opened, the non-resettable MIS data will be displayed if no errors exist. "CASH XXX" will flash for approximately 30 seconds, indicating the total number of units the machine has sold. After 30 seconds, "CASH XX.XX" will begin to scroll, indicating the total dollar amount the machine has accumulated. **NOTE:** Pressing selection button one will eliminate the 30-second wait time and advance you immediately to the "CASH XX.XX" scroll.

To access MIS data by individual selection, press selection button two during the "CASH XXXX" or "CASH XX.XX" scroll. Use selection button one to advance forward or backward through the selections. Please see page PG-7 to choose between count by selection or count by price.

NOTE: The MIS data that is displayed when the outer door is opened ("CASH XXXX" and "CASH XX.XX") is non-resettable. This data is accumulated over the life of the control board and can only be changed by replacing the control board.



SET-UP AND CODE DESCRIPTION

Error Display Mode

If selection button two is pressed at the “**Error**” prompt, the controller will enter the Error Display Mode. If no errors have occurred, the display will show “**000E**”. If an error has been detected since the last error reset, the display will show the first error summary code that has occurred. If selection button three is pressed while displaying any summary code, the controller will return to the “**Error**” prompt.

Note: See the *Trouble Shooting* section for errors and how to clear them.

EXAMPLE: “**CJ0**” would indicate a column jam error in column 1.

Coin Pay Out/Tube Fill Mode

If selection button two is pressed at the “**COIN**” prompt, the controller will enter the Coin Pay Out Mode. Pressing selection one will scroll through the denominations and pressing selection button two will start the denomination flashing. The display will indicate the denomination along with the number of that coin stored in the coin mechanism. If selection button two is pressed, a pay out of the displayed value will be made. Coins will continue to pay out as long as that selection button is held down.

EXAMPLE: If selection button two is pressed while 5 cents is displayed it will pay out a nickel.

When the controller enters the “**COIN**” mode, the operator is allowed to deposit any coin into the coin changer’s acceptor when that coin’s tube is not full. The tube inventory level will be displayed after each coin is accepted.

Test Mode

If selection button two is pressed at the “**TEST**” prompt, the controller will enter the Test Mode where you are able to test the motors, the display, the compressor, the lights, the evaporator fans and the heater.

Vend Testing

Pressing selection button two at the test mode will enter the controller into the vend test mode. Upon entry into the vend test mode the display will show the first summary test, “**CO1**” (column 1). Pressing selection button one will scroll through the column selections. Pressing selection button two will test vend the displayed column. In order to exit the setting, press selection button three.



SET-UP AND CODE DESCRIPTION (CONTINUED)



Jogging the Column

Pressing selection button two at the “JOG” mode, will enter into the Jog test mode. Upon entry into the Jog test mode the display will show the first summary test, “COL” (column 1). Pressing selection button one will scroll through the column selections. Pressing selection button two will access FOR (forward) or REV (reverse). Pressing selection button two again will move the motor in the desired direction. To exit the setting, press selection button three.



Display Testing

Pressing selection button one at the Jog test mode will advance the controller to the Display test mode. Upon entry into the Display test mode the display will flash a series of lines and dashes if all characters in the display are operational. To exit the setting, press selection button three.



Relay Testing

Pressing selection button one at the display test mode will advance the controller into the Relay test mode which allows the user to test the lights, compressor, evaporator fans or the heater. Upon entry into the rely test mode the display will read “COMP” for the compressor test. To scroll through the components for testing, press selection button one. To activate the component, press selection button two and the “O” will begin to flash. Use selection button one to toggle between “O” (deactivate) and “I” (activate). Pressing selection button two will activate the component if the display reads “XXX1”. To exit the setting, press selection button three.

COMP/I – Compressor test

LIGHT/I – Light test

FAN/I – Evaporator fan test

HEAT/I – Heater testing



MIS Data – Cash Mode

If selection button two is pressed at the “CASH” prompt, the display will show the non-resettable historical amount of money accepted by the machine. If selection button one is pressed, the display will show “\$:” (selection one) and the amount received for selection button one. Continue pressing selection button one to scroll through all of the selections. To exit the setting, press selection button three.



SET-UP AND CODE DESCRIPTION (CONTINUED)

SALE

MIS Data – Sales Mode

If selection button two is pressed at the “**SALE**” prompt, the display will show the non-resettable historical amount of units sold by the machine. If selection button one is pressed, the display will show “**St :**” (selection one) and the units sold for selection button one. Continue pressing selection button one to scroll through all of the selections. To exit the setting, press selection button three.

COST

Cost Setting Mode

The purpose of this mode is to enable the controller to set the vend price for each of the selections. If selection button two is pressed at the “**COST**” prompt, the display will indicate “**St :**”. Pressing selection button one will scroll through all of the selections or “**ALL**” to have all the vend prices set at the same price. Pressing selection button two will enter into the displayed selection button. Pressing selection button one will change the displayed vend price. Pressing selection button two again will save the price and selection button three will exit the mode.

DS&

Depth Setting Mode

The purpose of this mode is to enable the controller to set the vending depth for each column. If selection button two is pressed at the “**DS&**” prompt, the display will indicate “**0 X**”. Pressing selection button one will scroll through all of the columns. Pressing selection button two will enter into the displayed column. Pressing selection button one again will change the displayed depth settings from 1-4. Pressing selection button two will save the depth setting and selection button three will exit the mode.



SET-UP AND CODE DESCRIPTION (CONTINUED)



Option Mode

If selection button two is pressed at the “**OPtS**” prompt, the controller will enter the Option mode. The purpose of this mode is to allow the controller to select the configuration options desired.

Display	Description	Meaning
FS	Force Select	Force select enabled (y) or disabled (n)
BE	Bill Escrow	Bill Escrow enabled (y) or disabled (n)
SE	Error/Sold Out Indicator	Error/Sold Out indicator “ o ” enabled (y) or disabled (n)
SP	Single Price	Single Price enabled (y)/Multi-Price enabled (n)
ct	Count by Price/Count by Selection	Sales count by price is enabled (y)/ By selection is disabled (n) Sales count by selection is enabled (y)/ By price is disabled (n)
CC	Correct Change Light	Correct Change Light enabled (y)/Correct Change Light disabled (n)
OP	Allow Overpay	Allow overpay enabled (y)/Allow overpay disabled (n)
SC	Save Credit	Credit will remain for 5 minutes (y)/ Credit will remain indefinitely (n)
nv	Multi Vend	Multi vend enabled, single vend disabled (y)/ Single vend enabled, multi vend disabled (n)
LM	Learning Mode	Learning mode enabled (y)/Learning mode disabled (n)
RR	Auto MIS reset	MIS data will reset with DEX read (y)/MIS data will not reset with DEX read (n)

FIGURE 2



Space-to-Sales Setting Mode

If selection button two is pressed at the “**S&S**” prompt, the controller will enter the Space-to-Sales option. Upon entry into this setting the display will show the current option setting. Pressing selection button one will scroll through the various space to sales options as listed below. Pressing selection button two will change the current option and selection button three will save the desired option. ***For proper configuration settings refer to the label located on the inner door shear panel (See figure 3)***



SET-UP AND CODE DESCRIPTION (CONTINUED)

SPACE-TO-SALES CONFIGURATIONS

SEL#	ST10	STS9	STS8	STS7	STS6	STS5	STS4	STS3	STS2	STS1
	COL	COL	COL	COL	COL	COL	COL	COL	COL	COL
1	1	1,2	1	1	1,2,3	1,2	1	1,2	ALL	NONE
2	2	1,2	2	2	1,2,3	1,2	1	1,2	ALL	NONE
3	3	3	3	3	1,2,3	3	2	3	ALL	NONE
4	4	4	4	4	4	4	2	4	ALL	NONE
5	5	5	5	5	5	5	3	5	ALL	NONE
6	6	6	6	6	6	6	4	6	ALL	NONE
7	7	7	7	7	7	7	5	7	ALL	NONE
8	8	8	8	~	8	8	6	8	ALL	NONE
9	9	9	~	~	9	~	7	9	ALL	NONE
10	10	10	~	~	10	~	8	9	ALL	NONE
11*	~	~	~	~	~	~	9	10	ALL	NONE
12*	~	~	~	~	~	~	10	10	ALL	NONE

FIGURE 3

* Where available

Note: If none of the space-to-sales configurations are suitable, the operator can use the Custom Space-to-Sales Setting Mode.



Custom Space-to-Sales Setting mode

If selection button two is pressed at the “CS&S” prompt, the controller will enter the Custom Space-to-Sales option. Upon entry into this setting the display will show the current selection setting followed by the columns connected to that selection button.

Programming Connection Option

If selection button two is pressed while “St X” is displayed, the display will change to “CO !”. Pressing selection button one will increase or decrease the column number displayed. Pressing selection button two will actuate the changed connection status of the column number displayed. If the column number is flashing it is assigned to the selection that was entered. If the column number is steady, it is not assigned to the selection button. To exit this mode, press selection button three.



SET-UP AND CODE DESCRIPTION (CONTINUED)



Closed Door Data Retrieval Mode

If selection button two is pressed at the “**CDDr**” prompt, the controller will enter the Closed Door Data Retrieval Mode by displaying “**XXXX**” where “**XXXX**” is the password. Pressing selection button number one while the digits are flashing will change the current password. The available digits are 0-6. (**See note below.**) Pressing selection button two will save the change and advance to the next digit. In order to save the password and exit the mode, press selection button two while the last/fourth digit is flashing.

Note: *If one of the digits in the password is “0” this feature will be disabled since selection button “0” does not exist.*

Note: *This feature is not available when the vend price is set to “0.00”.*



Language Mode

If selection button two is pressed at the “**LRnG**” prompt, the controller will enter the Language Mode by displaying the currently assigned language. The available languages are **ENG** – English, **FRn** – French, **GER** – German, **ITA** – Italian, **Port** – Portuguese, and **ESP** – Spanish. Pressing selection button one will toggle though the language options. If selection button two is pressed, the display will save the language change and return the display to **LRnG**.



Clock Setting Mode

When button two is pressed at the “**CLOC**” prompt, the controller will enter the Clock Mode which allows you to set the clock on the control board. This field must be set in order to operate any modes associated with the time. Pressing selection button two while any of the options are displayed will enter you in to the clock setting options. Pressing selection button one will toggle you through the options. Pressing selection button three will exit this mode.

CLOCK SETTING OPTIONS	
YEAR	Current Year (Example: 2002)
DATE	Current Date (month, day)
Hour	Current Time (hours, minutes)
DST	Daylight Savings Time
Ctrl	Clock Control



SET-UP AND CODE DESCRIPTION (CONTINUED)



Lighting Control Mode

If selection button two is pressed at the “**LiE**” prompt, the controller will enter the Lighting Control Mode which allows you to have the lights turned off and on during specific time periods to conserve energy. Pressing selection button two while any of the settings are displayed will enter you in to the light control settings. Pressing selection button one will toggle you through the options. Pressing selection button three will exit this mode.

LIGHTING CONTROL SETTINGS	
Enb	Lighting control enabled (1)/disabled (0)
Str1	Start Time – Time lights shut off
dR4	Days associated with start time
Hour	Hour associated with start time
End1	End Time – Time lights turn back on
dR4	Days associated with end time
Hour	Hour associated with end time
Str2	2 nd Start time – time lights shut off
dR4	Days associated with 2 nd start time
Hour	Hour associated with 2 nd start time
End2	2 nd End Time – Time lights turn back on
dR4	Days associated with 2 nd end time
Hour	Hour associated with 2 nd end time



Refrigeration Mode

If selection button two is pressed at the “**rfC**” prompt, the controller will enter the Refrigeration Control Mode by displaying “**SEtP**” for set point temperature. Pressing selection button two again enters the temperature settings from “hhhh”(warmest) to “cccc”(coldest). Pressing selection button one will toggle through the settings. If selection button two is pressed, the display will return to “**SEtP**”. Pressing selection button one will change the display to “**ENP**” for temperature. To view the temperature, press selection button two. To change the degree scale, press selection button two when the display reads “**FORC**” for Fahrenheit or Celsius. To change the current degree scale, press selection button one to scroll between F and C. Pressing selection button two will return the display to “**FORC**”.

Note: The displayed thermostat setting and the actual temperature sensor reading for refrigeration control are listed below in Figure 4:



SET-UP AND CODE DESCRIPTION (CONTINUED)

Thermostat Setting Displayed	cccc	ccc	cc	c	norn	h	hh	hhh	hhhh
Cut-in Temperature (F)	34°	35°	36°	37°	38°	39°	40°	41°	42°
Cut-out Temperature (F)	30°	31°	32°	33°	34°	35°	36°	37°	38°
Nominal Temperature (F)	32°	33°	34°	35°	36°	37°	38°	39°	40°
Nominal Temperature (C)	0	0.6	1.1	1.7	2.2	2.8	3.3	3.9	4.4

FIGURE 4

Within the refrigeration mode, there is a refrigeration conservation mode which raises the cabinet temperature 18° F or 10° C during specified periods of time. Pressing selection button two while any of the settings are displayed will enter you in to the refrigeration control settings. Pressing selection button one will toggle you through the options. Pressing selection button three will exit this mode.

REFRIGERATION CONTROL SETTINGS	
ᄀᄀᄀ	Refrigeration control enabled (1)/disabled (0)
ᄀᄀᄀ	Start Time – Time temperature rises 18°F/10°C
ᄀᄀᄀ	Days associated with start time
ᄀᄀᄀ	Hour associated with start time
ᄀᄀᄀ	End Time – Time temperature returns
ᄀᄀᄀ	Days associated with end time
ᄀᄀᄀ	Hour associated with end time
ᄀᄀᄀ	2 nd Start time – Time temperature rises 18°F/10°C
ᄀᄀᄀ	Days associated with 2 nd start time
ᄀᄀᄀ	Hour associated with 2 nd start time
ᄀᄀᄀ	2 nd End Time – Time temperature returns
ᄀᄀᄀ	Days associated with 2 nd end time
ᄀᄀᄀ	Hour associated with 2 nd end time

- “ᄀᄀᄀ” – Monday
- “ᄀᄀᄀ” – Tuesday
- “ᄀᄀᄀ” – Wednesday
- “ᄀᄀᄀ” – Thursday
- “ᄀᄀᄀ” – Friday
- “ᄀᄀᄀ” – Saturday
- “ᄀᄀᄀ” – Sunday
- “ᄀᄀᄀ” – All Days



SET-UP AND CODE DESCRIPTION (CONTINUED)



Block Selection Setting

This feature is used to choose a group of selections and the time when those selections will be blocked from vending product. If selection button two is pressed at the “bL0” or “bL2” prompt, the controller will enter the Selection Blocking Control Mode. Upon entry into this program, the display will show the first sub-mode “001” or “002” depending on which blocking mode you are using. Using selection button one will let the operator toggle between the following modes:

BLOCK SELECTION OPTIONS	
001	Controls blocking option
SbL1	Set selection buttons – (y) assigned/(n) not assigned
Stt1	Set time for machine to turn off
dR4	Set days for blocking to start
hour	Set hours for blocking to start
StP1	Set time for machine to turn back on
dR4	Set days for blocking to stop
hour	Set hours for blocking to stop



Discount Setting Mode

This feature is used to choose a group of selections that will be discounted, the amount of discount, and the time when the discount will occur. If selection button two is pressed at the “d:SC” prompt, the controller will enter the Discount Setting Mode. Upon entry into this program the display will show “001”. If selection button one is pressed it will toggle through the discount setting mode as listed below. Pressing selection button three will save the settings and return to the “d:SC” mode.

DISCOUNT SETTING OPTIONS	
001	Turns the discount setting On/Off
SdSC	Set selection buttons – (y) assigned/(n) not assigned
Stt2	Set time for discounting to begin
dR4	Set days to discount
Hour	Set time for discounting to begin
StoP	Set time for discounting to stop
dR4	Set days for discounting to stop
Hour	Set time to start (24 hours)
LESS	Set discount amount



SET-UP AND CODE DESCRIPTION (CONTINUED)

OVER

Over-Ride Mode (Units equipped with optional key switch)

This feature is used to allow you to manually over-ride (via a key switch) pricing, blocking, low energy operation and discounting. If selection button two is pressed at the “**OVER**” prompt, the controller will enter the Over-Ride Mode. Upon entry into this program the display will show “**FREN**”. If selection button one is pressed it will cycle through the over-ride setting options as listed below. Pressing selection button three will save the currently displayed setting and return the operator to the “**OVER**” prompt.

OVER-RIDE SETTING OPTIONS	
FREN	Enable/Disable free vend (Edit mode Y/N)
BLCK	Selection blocking over-ride
LITN	Lighting over-ride
REFN	Refrigeration over-ride
DISN	Discounting over-ride

FREN

Over-Ride Free Vend

If selection button two is pressed at the “**FREN**” prompt, the controller will enter the Free Vend Enable Option. Upon entry into this program the display will show the current setting “**FREN**”. Press selection button two. Pressing selection button one will toggle between “y” for enabled and “n” for disable. Pressing selection button two will save the currently displayed setting. Pressing selection button three will return the operator to the “**FREN**” prompt.

“Y” = Enable free vend.

“N” = Disable free vend.

BLCK

Over-Ride Selection Blocking

If selection button two is pressed at the “**BLCK**” prompt, the controller will enter the Selection Blocking Over-Ride Enable Option. Upon entry into this program the display will show the current setting “**BLCK**”. Press selection button two. Pressing selection button one will toggle between “Y” for enable and “N” for disable. Pressing selection button two will save the currently displayed setting. Pressing selection button three will return the operator to the “**BLCK**” prompt.

“Y” = Enable selection blocking.

“N” = Disable selection blocking



SET-UP AND CODE DESCRIPTION (CONTINUED)

A small icon representing lighting, showing the word "LITN" in a stylized, pixelated font.

Over-Ride Lighting

If selection button two is pressed at the "LITN" prompt, the controller will enter the Lighting Over-Ride Option. Upon entry into this program the display will show the current setting "LITN" for enable and "LITN" for disable. Pressing selection button two will save the currently displayed setting. Pressing selection button three will return the operator to the "LITN" prompt.

"Y" = Enable Over-Ride Lighting blocking.

"N" = Disable Over-Ride Lighting blocking

A small icon representing refrigeration, showing the word "RFEN" in a stylized, pixelated font.

Over-Ride Refrigeration

If selection button two is pressed at the "RFEN" prompt, the controller will enter the Refrigeration Over-Ride Option. Upon entry into this program the display will show the current setting "RFEN" for enable and "RFEN" for disable. Pressing selection button two will save the currently displayed setting. Pressing selection button three will return the operator to the "RFEN" prompt.

"Y" = Enable refrigeration over-ride.

"N" = Disable refrigeration over-ride.

A small icon representing discount, showing the word "DISN" in a stylized, pixelated font.

Over-Ride Discount


If selection button two is pressed at the "DISN" prompt, the controller will enter the Discounting Over-Ride Enable Option. Upon entry into this program the display will show the current setting "DISN" for enable and "DISN" for disable. Pressing selection button three will save the currently displayed setting and return the operator to the "DISN" prompt.

"Y" = Enable discount over-ride.

"N" = Disable discount over-ride.




12.1 WIRING DIAGRAM

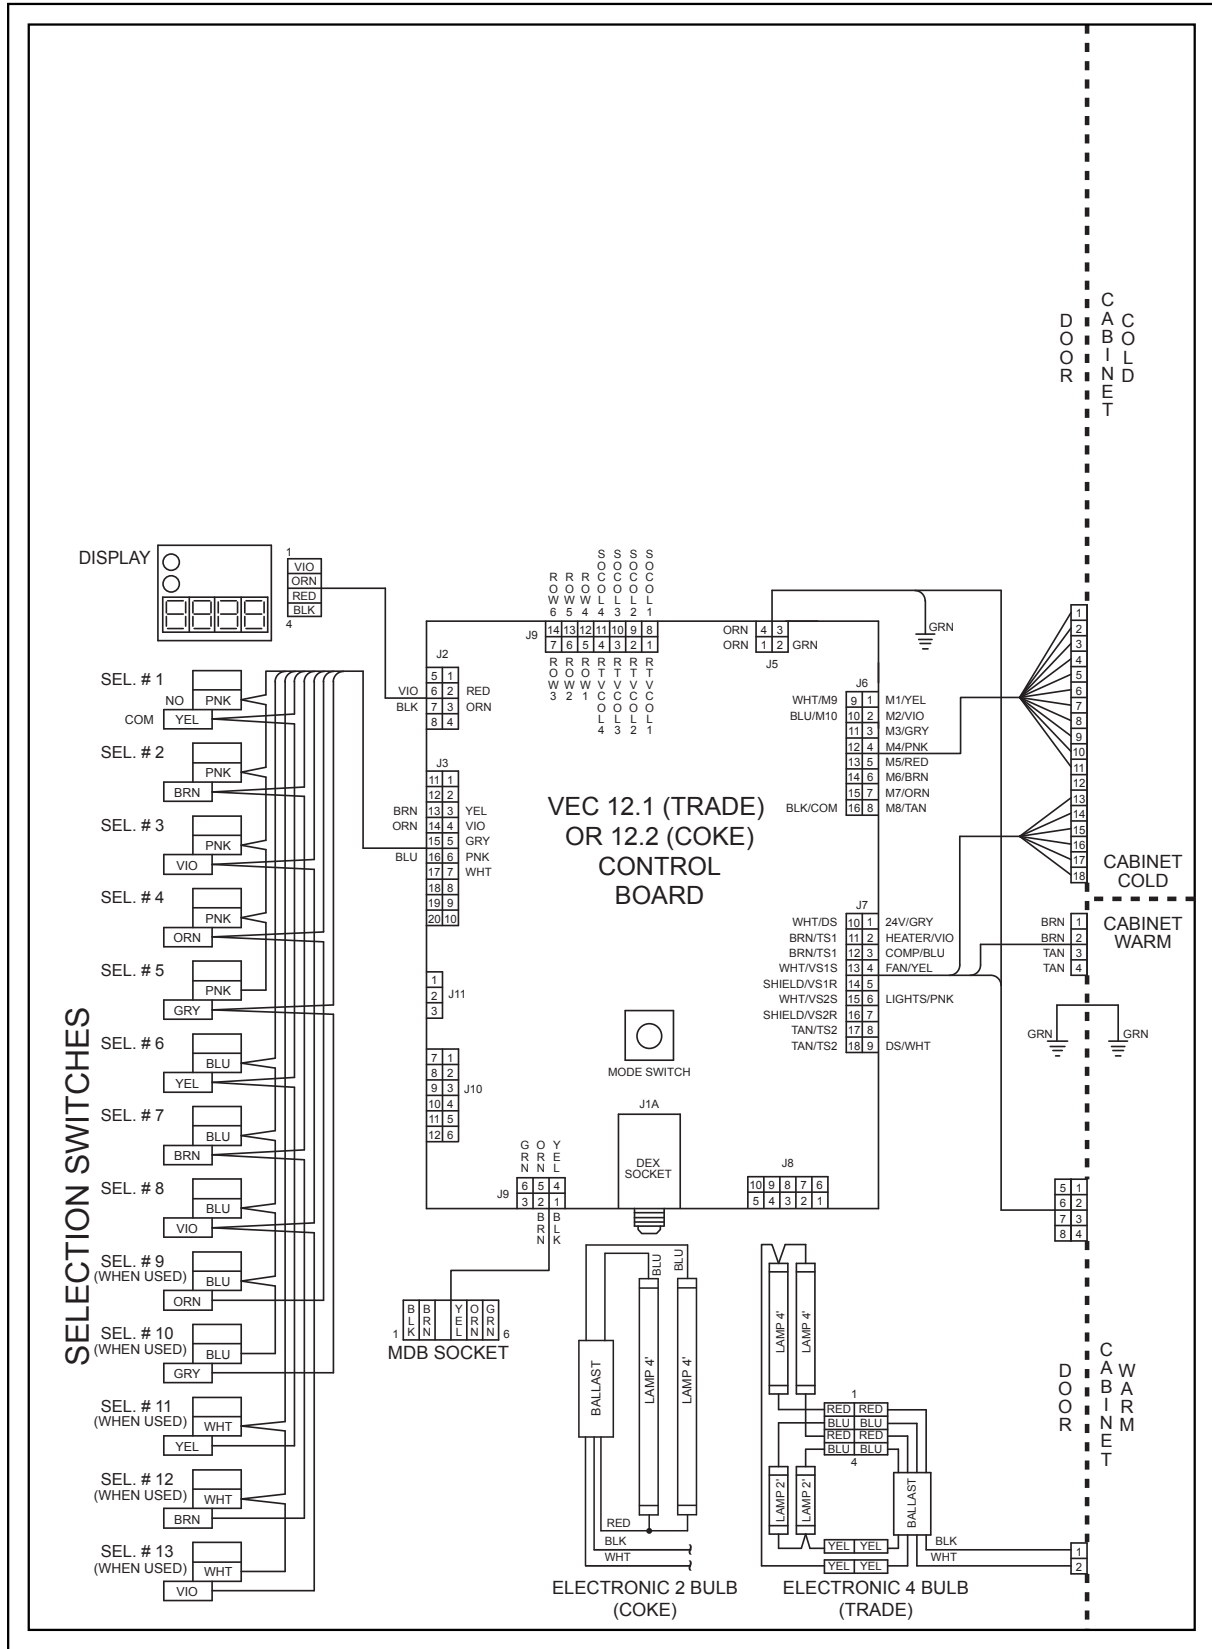



12.1 WIRING DIAGRAM (CONTINUED)

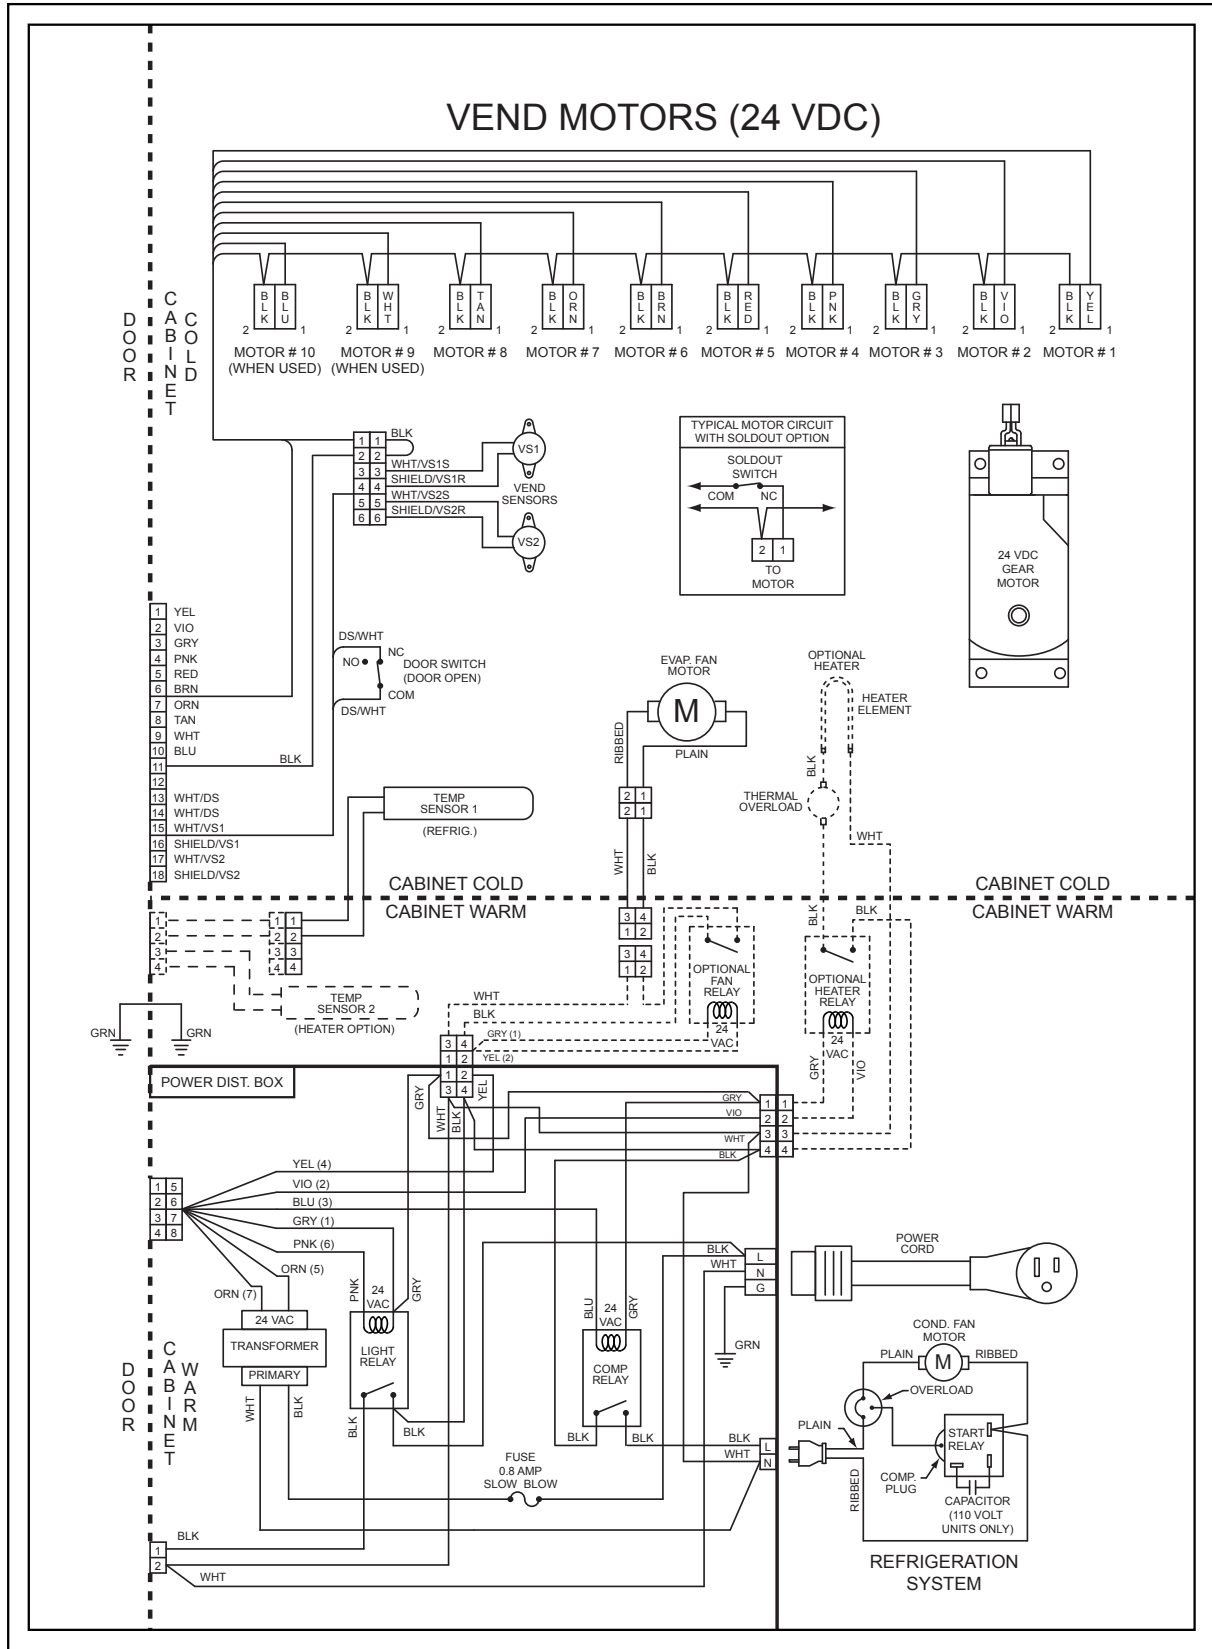



NOTES

1. If the outer door is left open for over an hour, the lights, evaporator fans and compressor will become active. In order to over-ride this option, press the door switch one time.